 
 


Instructions for replacing B1207 (12V Battery)


1) Unscrew the #6 nut that holds the top of the battery to the enclosure. Keep this nut, lock washer, and washer for installing the new battery.

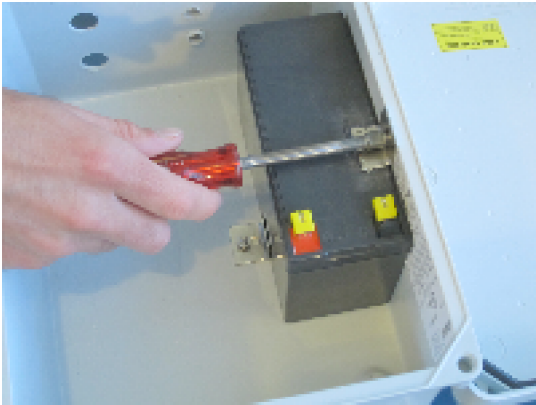

2) Loosen the #8 nut that holds the bottom of the battery in place. Once the nut is loosened, slide the metal bracket away from the battery.

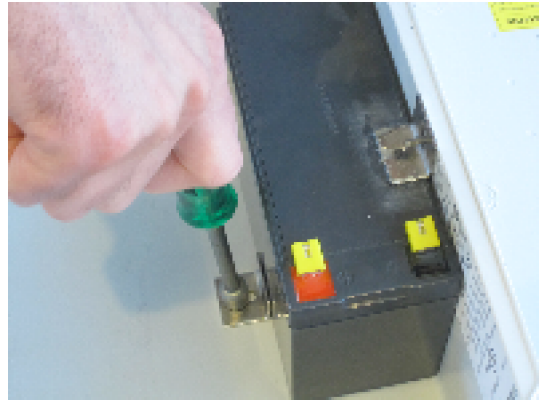

3) Remove the battery.

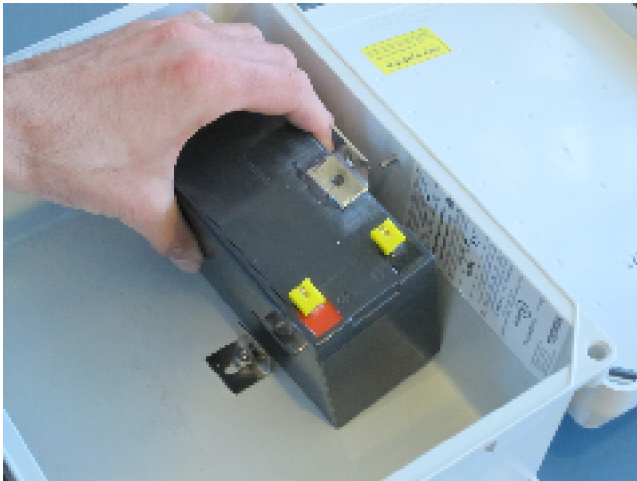

4) To install the new battery, follow steps 1-3 in reverse. Make sure the metal bracket that holds the bottom of the battery is flush against the battery before tightening. Do not over-tighten nuts.

